



For 'Mic on cable'

- Plug mic into socket
- Move Fader to 'Normal'
- Adjust small 'Gain' knob to suit

Gold Phono Sockets for iPod

1 & 2 - as required
3 & 4 on the white dots

Fully Left

Vertical

Vertical

Vertical

3 o'clock

Fully Left

Vertical

Vertical

White knob iPod Volume

Fully Left

Back Speakers Volume

| | | | | | |
|--------------|-------------|---------|-----------|----|-----|
| Stage Centre | Stage Right | Clip on | Hand Held | CD | DVD |
|--------------|-------------|---------|-----------|----|-----|

Mixer Default Settings